


LANAI DOORS


INSWING CONFIGURATIONS

Combine a left and a right configuration or just one from either side to design over 80 possible configurations. For an example, a four-panel system with a man door could be:


1L




2L

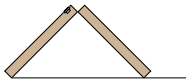


3L

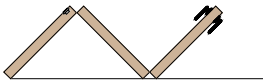


4L

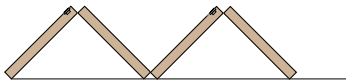


5L

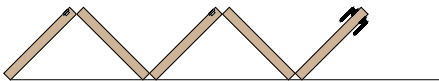


6L

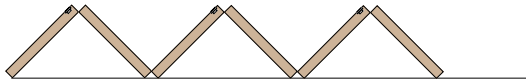


7L

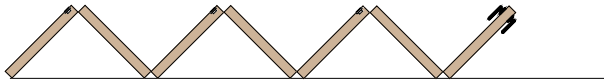


8L

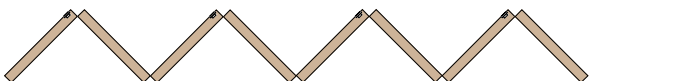


1R

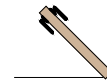


2R

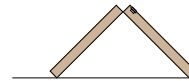


3R

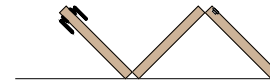


4R

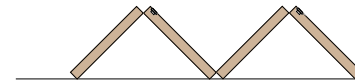


5R

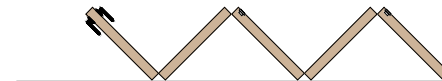


6R

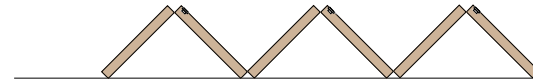


7R

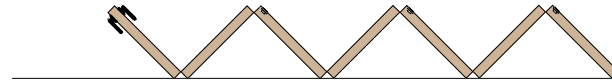

8R

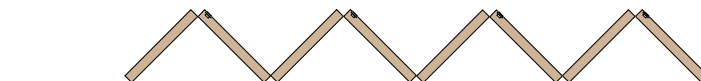

1L

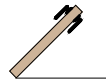

INSIDE

OUTSIDE

3R

