


LANAI DOORS


OUTSWING CONFIGURATIONS

Combine a left and a right configuration or just one from either side to design over 80 possible configurations. For an example, a four-panel system with a man door could be:


1L




2L

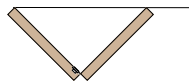


3L

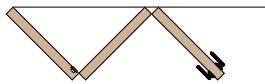


4L

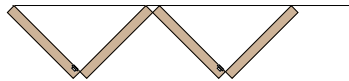


5L

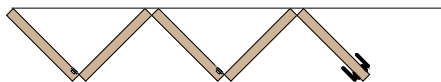


6L

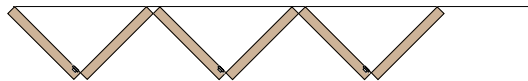

7L

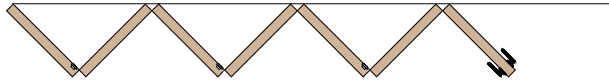


8L

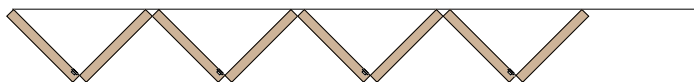

INSIDE


1L

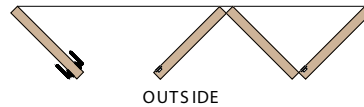


3R

OUTSIDE


1R

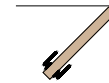


2R

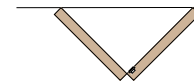


3R

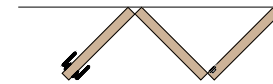


4R

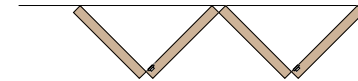


5R

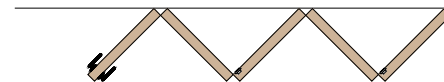

6R

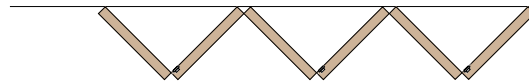

7R

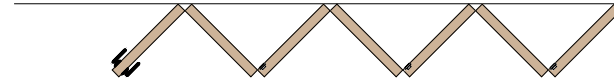

8R

